

















 













# UNIVERSAL REMOTE BUTTON FUNCTIONS

BUTTON		FUNCTION
System ON/OFF		Powers off the STB and all devices programmed to the remote.
	POWER	Powers on/off whatever device mode that is currently activated. For example, if the remote is activated for the TV it will power on/off the TV. If activated for the DVD or VCR it will power them on/off.
	STB	Activate the set top box (STB) mode on the remote control.
	AUX, DVD, VCR, TV	Activate alternate modes on the remote control.
	GUIDE	Display the interactive Channel Guide.
	HELP	Display HELP.
	INFO	Display current show information.
	EXIT	Clear the menu or screen.
	MENU	Display Main Menu.
+ / -	PAGE	Channel Guide page up and page down.
<b>MENU NAVIGATION</b>		
	OK/SEL	Select a highlighted item.
<>△▽	ARROW	Navigate among selectable items on the screen.
<b>SHORTCUTS</b>		
A 	CH GUIDE	Channel Guide
B 	PREVIOUS	Display previous menu or window.
C 	INFO	Display current show information.
D 	HELP	Display HELP.
<b>CHANNEL GUIDE CONTROLS</b>		
+ / -	PAGE	Channel Guide page up and page down.
<>△▽	ARROW	Up/Down/Back or Forward one channel or time at a time.
▲ ▼	VOL	Raise or lower TV volume.
▲ ▼	CH	Change the channel number up or down.
	MUTE	Mute the volume. Press again to resume previous volume setting.
	LAST	Return to previous TV channel.
	GUIDE	Channel Guide
<b>VOD/RECORDED PROGRAM (DVR) CONTROLS</b>		
ON Demand Button		Not an active button at this time.
PAGE BACK & FORWARD		Not active buttons at this time.
	HOME	Reload Set Top Box.
SKIP BACK & FORWARD		Not active buttons at this time.
Green DVR Button		Not an active button at this time.
	REPLAY	Not active buttons at this time.
	FWD	
	REW	Rewind video or recorded program.
	PLAY	Play video. Resume normal play from <b>Rewind, Fast Fwd, or Pause.</b>
	FF	Fast forward through video or recorded program. Press repeatedly to increase speed. In the channel guide fast forward will display the next day.
	STOP	Stop video.
	PAUSE	Pause the video or recorded program. (Press  to resume where you paused.)
	RECORD	Record program to a DVR. Press Red Rec button then OK > OK.
<b>NUMBER BUTTONS</b>		
1, 2...0	NUMBER	Select channel or enter login password.
<b>OTHER</b>		
	VIDEO SOURCE	TV video source. In TV mode press video source to display which video stream you are on.
+ / -	CH	Channel Guide page up and page down.
	LIGHT	Will backlight the keypad for use in the dark.